

# THERMOCOUPLE TEMPERATURE HEAD TRANSMITTER THT201



## INSTALLATION GUIDE

IG\_INHO\_THT201\_E01A

# THERMOCOUPLE TEMPERATURE HEAD TRANSMITTER THT201

## INSTALLATION GUIDE

step  
**01**

CONNECT AND CONFIGURE THT201 THERMOCOUPLE TEMPERATURE HEAD  
TRANSMITTER

Pages 3 to 6

---

step


**01**

CONNECT AND CONFIGURE THT201 THERMOCOUPLE TEMPERATURE HEAD TRANSMITTER

DOWNLOAD AND INSTALL "TEKON CONFIGURATOR" FREE SOFTWARE FROM TEKON ELECTRONICS WEBSITE


**01**

Connect the THT201 transmitter to the SARC2 cable configurator.

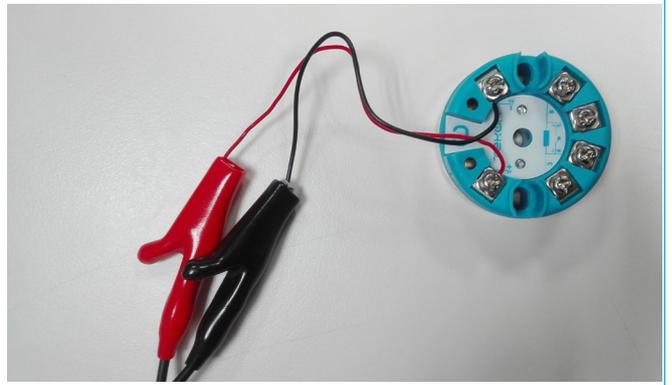

**02**

Connect the Thermocouple to the THT201 transmitter.

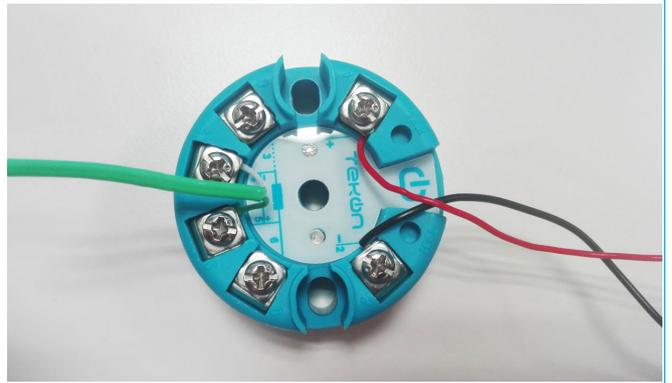

**03**

Connect the SARC2 configurator cable to the computer.



**04**

Execute Tekon Configurator software.




step  
**01**

CONNECT AND CONFIGURE THT201 THERMOCOUPLE TEMPERATURE HEAD TRANSMITTER

**05**


Select the “Search and Connect” option.

**Note:** for security reasons, it is only allowed to change the settings during the first 60 seconds after power up. If you click on the name of the product, a browser window will open on the product page on Tekon Electronics website.

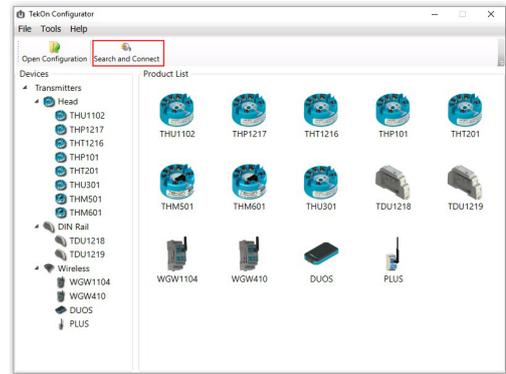


**06**

While the THT201 transmitter is in configuration mode, the blue led will flash continuously.

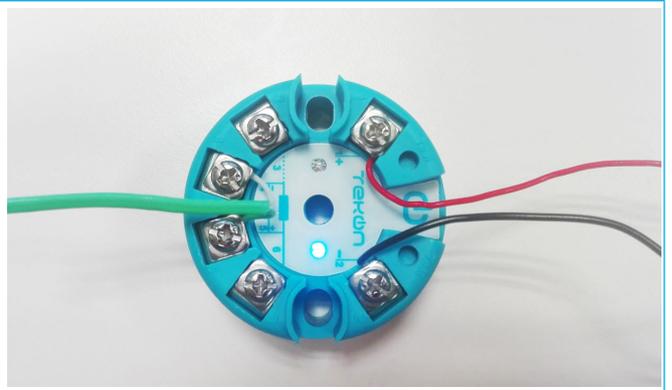


**07**

The software automatically identifies the device and opens the respective configuration form.

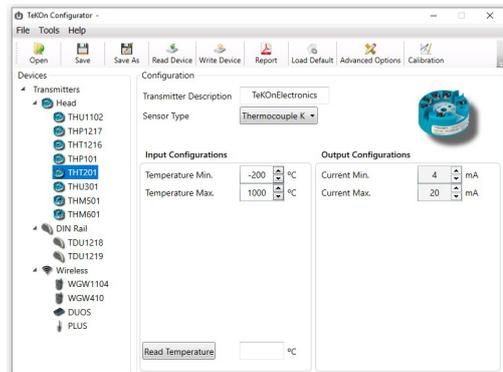

**08**

Choose which thermocouple you want to use.

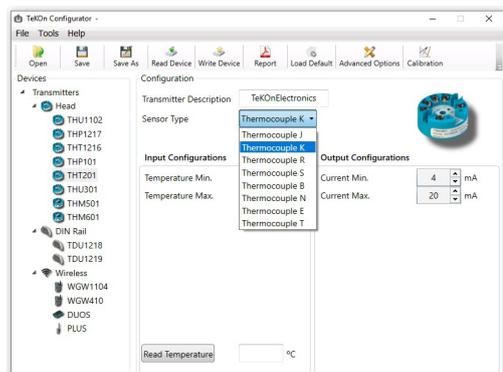


step  
**01**

**CONNECT AND CONFIGURE THT201 THERMOCOUPLE TEMPERATURE HEAD TRANSMITTER**

**09**


To change the selected thermocouple default settings, update the value of the desired parameter and select the **“Write Device”** option.

In this example, we use the **thermocouple K** and change the **“Temperature Min.”** to -100 and **“Temperature Max.”** to 100.

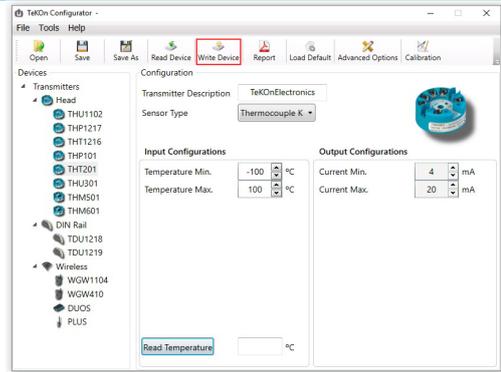


**10**

To confirm if the change has been successfully completed, select the **“Read Device”**.

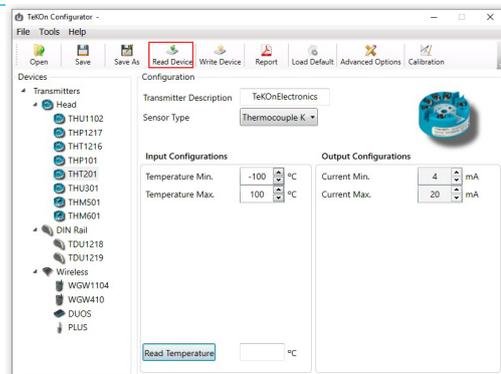

**11**

Click on the **“Read Temperature”** button to read the current temperature value.

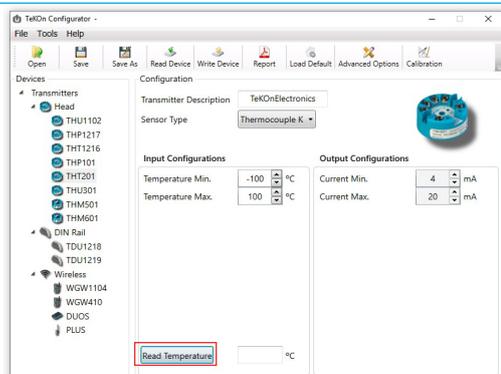




TEKON ELECTRONICS  
a brand of Bresimar Automação S.A.

Quinta do Simão  
3800-230 Aveiro  
PORTUGAL

P.: +351 234 303 320  
M.: +351 933 033 250  
E.: sales@tekonelectronics.com

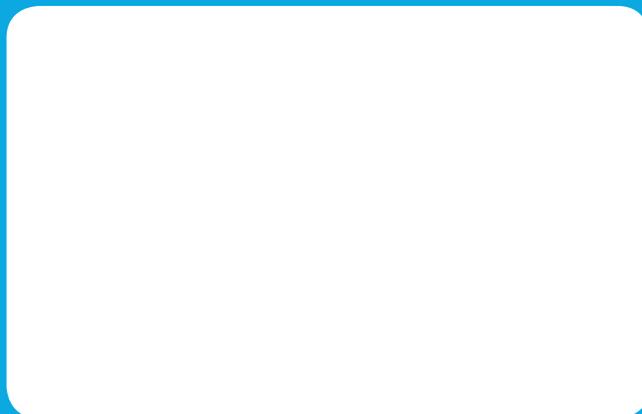

Cofinanciado por:



UNIÃO EUROPEIA  
Fundo Europeu  
de Desenvolvimento Regional